TANDD

Voltage Recorder VR-71

User's Manual

Thank you for purchasing our product. Carefully read this instruction manual before using this unit.

CE

<Introduction>

Notices about this User's Manual	2
Software User's Agreement	3
Safety Precautions and Instructions	4
What is Voltage Recorder?	8
Package Contents 1	0
Part Names and Functions 1	1

<Getting Ready>

Installing the Batteries 14
Connecting the Input Cable 15
Turning the Power On 16
Installation 17
Software Operation 18
Connecting the Data Logger 19
Setting up the COM Port 20

<Basic Functions>

Recording Start
How to Start Recording via Computer 22
How to Start Recording via Buttons on
Logger 24
Scale Settings
Scale Settings 25
Creating Measuring Unit Patterns for
Logger Display 26
Downloading Data 28

<Graph>

Graph Display Names and Functions	29
Graph Maintenance	32
Making Changes to the Graph Display	32
Graph Operations: [Graph] Menu	38

<Other Functions>

Viewing Current Data	39
Saving Recorded Data	40
Creating Text File	41
Opening a Saved File	42
Reinstalling	43

<Others>

Troubleshooting2	14
Specifications	17
Options 4	19
WarrantyOn Bao	ck

Notices about this User's Manual

In order to properly use this product, please carefully read this manual before using.

T&D Corporation accepts no responsibility for any malfunction of and/or trouble with this product or with your computer that is caused by the improper handling of this product and will deem such trouble or malfunction as falling outside the conditions for free repair outlined in the attached warranty.

- All rights of this User's Manual belong to T&D Corporation. It is prohibited to use, duplicate and/or arrange a part or whole of this User's Manual without the permission of T&D Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Windows Vista is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Company names and product names are trademarks or registered trademarks of each company.
- Specifications, design and other contents outlined in this manual are subject to change without notice.
- On screen messages in this manual may vary slightly from the actual messages.
- Please notify the shop where you purchased this product or T&D Corporation of any mistakes, errors or unclear explanations in this manual.T&D Corporation accepts no responsibility for any damage or loss of income caused by the use of our product.
- This product has been designed for private or industrial use only. It is not for use in situations where strict safety precautions are necessary such as in connection with medical equipment, whether directly or indirectly.
- We are not responsible for any malfunction or trouble caused by the use of our product or by any
 problem caused by the use of measurement results of our unit. Please be fully aware of this before
 using our product.
- Some of our products, which come under the category of strategic goods in foreign trade law, need the permission of the Japanese government to be exported outside of Japan.
- Please read the warranty and provisions for free repair carefully.
- The warranty that is included in this user's Manual cannot be reissued, so please keep it in a safe place.
- The User's Manual for this and all T&D products can be downloaded free of charge from our web site.

*FCC Compliance Statement for American Users

This device complies with Part 15 of the FCC Rules.

Operation is subject to following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Warning:

This equipment has been verified to comply with the limits for a Class A personal digital device, pursuant to Subpart B of Part 15 of FCC Rules. Only peripherals (computer input/output devices, terminals, printers, etc.) certified or verified to comply with the Class A or B limits may be attached to this equipment. Operation with non-certified or non-verified personal computer and/or peripherals is likely to result in interference to radio and TV reception. The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. You are cautioned that changes or modifications not expressly approved by party responsible for compliance could void your authority to operate the equipment.

Escape Clauses

- T&D Corporation does not guarantee the operation of "Voltage Recorder for Windows".
- T&D Corporation shall not accept any responsibility for any damage, whether direct or indirect, that results from the usage of "Voltage Recorder for Windows".
- Specifications of "Voltage Recorder for Windows" may be subject to change and service may be terminated without advance notice to the user. In such a case, T&D Corporation shall not be responsible for any damages, whether direct or indirect, from the inability to use "Voltage Recorder for Windows".
- T&D Corporation has no obligation to correct any defects found in "Voltage Recorder for Windows".

Copyright

- The Copyright for "Voltage Recorder for Windows", including the program and relevant documents, belongs solely to T&D Corporation.
- The reprinting or redistribution for commercial purposes whether in part or in whole, in magazines
 or as a part of any product is strictly forbidden without the expressed consent of T&D Corporation.
 Any inquires concerning commercial redistribution should be directed to the Sales Department of
 T&D Corporation.
- Please do not attempt to make any changes or modifications to "Voltage Recorder for Windows".

Please carefully observe the following safety measures when using our product.

To prevent any loss or damage to our customers, other people and / or property, and to ensure the proper use of our products we ask that before using our product you carefully read, understand and follow the safety rules and precautions for our products as outlined below.

Explanation of Symbols

Explanation of Warning Symbols

These entries are actions that absolutely under no circumstance should be taken. The taking of such an action may cause serious personal physical damage or death.
These entries are actions that if taken may lead to physical injury or damage to parsons or things.

Explanation of Picture Symbols

\bigtriangleup	Denotes an important warning or caution. Near the symbol will appear another symbol giving details. (EX : A stands for CAUTION AGAINST ELECTRIC SHOCK)
\bigcirc	Denotes a forbidden action. Inside or near the symbol will appear another symbol giving details. (EX : (\$)stands for DO NOT TAKE APART)
	Denotes an action that you must take. Near the symbol will appear another symbol giving details. (EX : Stands for PULL POWER PLUG OUT FROM OUTLET)



While installing and using this product, make sure to always follow your computer manufacturer's warnings and cautions.



Do not take apart, repair or modify the main unit. It may cause fire, electrocution or damage. Ask the shop where you purchased the product or T&D Corporation to carry out any repairs.



If water or a foreign body enters into this unit, immediately remove the batteries and stop using. Continued use may cause fire or electrocution.



Do not touch the input cable with wet hands or if there are water drops on the cable. Depending on what you are measuring, this may cause electrocution.



Do not use this unit in wet or humid places, such as a bathroom. Continued use may cause fire, electrocution or damage.



Store all batteries, input cable, communication cable, and Voltage Recorder units out of the reach of children. It is dangerous to swallow batteries.



If any smoke or strange smells are emitted from the unit, immediately cease using it. Continued use may cause fire, electrocution or damage.



Do not drop the unit, or expose the unit to a strong impact. If that happens to the unit, immediately remove the batteries and stop using. Continued use may cause fire or electrocution.



This device is designed to measure and record Voltage. Do not use it for any other purpose than to measure and record Voltage.

 \bigcirc

This unit is not water-resistant.

If the unit gets dirty, wipe it with a clean cloth and a mild detergent.

 \triangle

The VR-71 uses a common ground for both channels, so when connecting input cables be sure to connect the ground (black wire) for each channel to the same.



The possible measuring range for this data logger is: $\pm 15V$ with a maximum input of $\pm 20V$. Connecting it to high voltage (AC 100V, etc...) may cause damage to the logger and / or to the signal origin.



Do not remove the input cable from the logger and leave it while still connected to the origin of the signal. There is a chance that it will come into contact with another signal and cause a short.



Do not expose the unit to harmful gases or chemicals. It may cause corrosion and / or other danger to the unit and to people handling the unit.



Do not use any batteries other than AAA Alkaline batteries. It may cause fire or damage.



Condensation may occur if the unit is moved from one environment to another where the difference in temperature is great. Use the unit in an environment where the ambient temperature is from 0 to 50°C and the humidity is from 90%RH (no condensation) or less.



Battery terminals may provide insufficient contact due to age or vibration. Please be careful not to lose data due to insufficient contact.



Battery life depends on the measurement environment, communication frequency, recording interval and battery quality.



If water or a foreign object enters the case, immediately cease using it.



Remove batteries from any unit that will not be used for a long period of time. Batteries left in a unit not being used for a long time may leak and cause a malfunction.



To prevent damage to the unit from static electricity, remove static electricity from your body by touching metal around you (door knob, window frame) before touching the unit. Static electricity may cause not only damage to the unit, but may cause breaks in or a loss of data.



Do not use or store the Thermo Recorder in any of the following places. Doing so may cause electrocution, fire and/or other adverse effects to the device and/or your computer.

Areas exposed to direct sunlight This will cause the inside of the device to become overheated and may cause fire, deformation, and/or other damage including malfunction.

Areas prone to strong magnetic fields This may cause damage including malfunction.

Areas exposed to water leakage This may cause electrocution or other damage including malfunction.

Areas exposed to excessive vibration

This may cause injury, malfunction, damage or loss of proper electrical contact.

Areas near fire or exposed to excessive heat This may cause damage including malfunction and deformation.

Areas prone to smoke, dust and dirt This may cause damage including malfunction.

Overview

The data recorded into the Voltage Recorder units can be downloaded to your computer with our exclusive software whereby you can easily process the data into graphs, tables, save to files and / or print it out. Of course you can display the voltage reading as is, or by using the software to select the desired scale, convert and display the readings in the unit of your choice

Voltage Recorder VR-71 Basic Functions

Each Logger has 2 Measurement / Recording Channels

It's possible to simultaneously measure and record at two places with one logger. By pressing the DISPLAY button on the logger, you can choose to set the LCD display to show both channels' readings alternatively, show one channel as a fixed display or show neither channel.

Voltage Measurement Range: DC±15V

Our input cables and probe can measure and record various output signals. The VR-7101 or VR-7102 (optional) can record signals of \pm 15V and our optional VR-7103 probe allows a range of 4 20mA.

Choose the Display Unit

It is possible using the software to create and edit dot matrix patterns to be used in the LCD as the unit of measurement.

Recording Capacity : 8,000 readings x 2 channels

Each channel can record and store up to 8000 readings. At the longest recording interval of 60 minutes, recording can continue consecutively for 1 year.

There are 20 recording intervals / Shortest is 0.02 seconds.

There are 20 recording intervals (0.02 seconds to 60 minutes) to select from. There are two recording modes to choose from: One Time and Endless.

9 Months of Continued Use on 2 AAA Batteries

Using our specially designed low energy consumption circuit this unit can run on two AAA alkaline batteries for up to 9 months of continued use. No need to worry about where you place it as the battery will allow you to measure and record over long periods of time whether the unit is in transit or in a distant place.

Backup Function

With this reliable function we have removed the worry about losing data when the switch is accidentally turned off or power is lost.

Auto-Range Function / ± Input

You can manually set the range or you can set to have the auto-range function automatically select the best range from the 4 input ranges $\pm 1V$, $\pm 2V$, $\pm 6V$, $\pm 15V$.

NOTE:

If the recording interval is 0.5 seconds or less the auto-range function cannot be used.

Preheat Function / Simultaneous Recording Function

The expansion unit (optional) allows you to transmit a preheat signal that is synchronized with the VR-71 recording timing to turn sensors or other devices ON and OFF, and also allows you to simultaneously record with up to 4 VR-71 units.

Basic Functions of Voltage Recorder for Windows

The easy-to-use software included with this product offers a variety of useful functions at your fingertips including: control of data logger settings data downloading, graph display, table creation, printing, and file output.

Recording Start Settings

All types of Recording Settings can be made here: Channel Name(s), Recording Mode, Recording Interval, Input Voltage Range, and Scale Settings. By setting a date and time in the main unit you can easily program to start recording on that date at the set time.

Scale Conversion / Unit of Display Selection Function

It is possible to set the scale and unit of display for the voltage range of each channel. Scale Conversion: Specify whether to use 2 voltage points to convert the scale or to use the conversion equation of y=Ax+B. (y stands for the value after conversion and x is the voltage input directly from the sensor)

Choose the Display Unit: It is possible using the software to create and edit dot matrix patterns to be used in the LCD as the unit of measurement.

Current Data Display

By communicating at a 1 second interval with a VR-71 logger connected to your computer it is possible to view the current data readings in real time graph form.

View and Print Graphs

View 8 channels of data in 1 display

Downloaded data from the main unit is automatically displayed in graph form. Up to 8 channels (4 units) of data can be represented in one graph. The data scale and unit to be used in the display can be set with the Scale Settings.

Easy zoom in and out with mouse

By selecting a range with your mouse you can easily zoom in and out on data.

Calculate and view the highest, lowest and average readings for a desired range

In the Graph, for each channel it is possible to designate a desired range from which the highest, lowest and average readings will be calculated and displayed.

Graph Printing

It is possible to easily print in color the Graph as it is being displayed.

View and Print Measured Data List

You can view the data displayed in the graph window as a list and then choose to print.

View in Easy to Distinguish Colors

In the data list, the highest value will appear in red, the lowest in blue, and the average in pink. Printing the Data List

It is possible to print the entire list as displayed or to select pages for printing.

Creating Text File

It is possible to convert the data for a specified range (time period) to common text file format (CSV type format), so that it can be exported to spreadsheet software such as Excel or Lotus.

Package Contents

The following items are included in the package:



Voltage Recorder VR-71



Input Cable VR-7101 x 2



Voltage Recorder for Windows®

Software (CD-ROM) x 1



AAA Alkaline Battery x 2



User's Manual (Warranty) x 1



Serial Communication Cable x 1

Appearance Diagram





Button Operations

DISPLAY Button : Press to switch to View Ch 1 only / View Ch 2 only/ View both channels alternately / View neither channel.

INTERVAL Button : Press to make changes to the Recording Interval Setting REC/STOP Button : Press to start and stop recording.

LCD Display



112...Channel Mark

The channel number of the measurement being displayed will appear.

2 REC...REC Mark

The recording status is displayed.

ON(REC):Recording in progress, BLINKING():Recording for programmed start.

3 PATA ... Recording Capacity

After every 2000 readings the scale will be marked from left to right.

Display Status

If Endless... PATA Recording will continue and display will not change.

 $\underline{\text{DATA}} \rightarrow \underline{\text{DATA}} \rightarrow \underline{\text{DATA}} \rightarrow \underline{\text{DATA}}$

If Onetime...The display will change to FULL and recording will stop.

④ENDLESS /ONETIME...Recording Mode

There are two recording modes to choose from, One Time and Endless. You can make changes to recording mode with the software.

Default : ONETIME

⑤ ■ Battery Life Warning Display

When the battery power becomes low, a mark will appear on the LCD of the main unit, if power goes even lower the unit will enter Sleep mode^{*1} and the display will change. Please change the battery as soon as the Battery Warning Mark appears.



[Main Unit LCD Display]

*1 If the battery is not changed and power becomes even lower, all normal operations will stop.

6 Unit of Measurement

The unit of measurement of the reading being displayed will be shown in 3 letters. It is possible to create letter patterns with the software.

Current measurements, recording intervals and so on will appear here.

Other Displays





COM

During the communication of settings or during the download of data the (COM) mark will appear in the space where readings usually appear.

FULL

When recording under the One Time mode and upon reaching capacity of 8,000 readings, "FULL" will appear in the LCD display and recording will automatically stop.

REC DATA ENDLESS	
1	
2	

Non-Display

By selecting to not view the measurement readings, only the readings themselves will be hidden and other messages will still be in view.

LCD Display with Expansion Unit connected



Simultaneous Recording Settings (MST mark) If during settings for Simultaneous Recording, the unit was set as the Master, by pressing the REC / STOP button on the unit the letters MST will appear in the unit's LCD.

Simultaneous Recording Settings (SLV mark) If during settings for Simultaneous Recording, the unit was set as the Slave, by pressing the REC / STOP button on the unit the letters SLV will appear in the unit's LCD.

Installing the Batteries

- 1. Remove the battery cover form the back of the unit.
- **2.** Insert 2 AAA alkaline batteries, making sure that the + and are in the correct direction.

Always use new batteries.



3. Replace and close the battery cover.

Changing the Batteries

- **1.**When battery power becomes low, a battery life warning signal will appear in the unit's LCD display.
- If, at this time you change the batteries, recording will continue uninterrupted and all data will be saved for downloading.
- **2.**If the batteries are not changed and power becomes even lower, SLP will appear in the LCD display.
- The unit will automatically go into sleep mode in order to protect the data and all normal operations will stop. If you change the batteries at this point, it is still possible to download all saved recorded data.

3.If the batteries are further left unchanged, the display will automatically shut off. If all battery power is lost, all data will be lost as well.

Connecting the Input Cable

To ensure a proper connection make sure that the cable plug is completely inserted.



The logger internal circuitry is as follows



NOTE:

The VR-71 uses a common ground for both channels, so when connecting input cables be sure to connect the ground (black wire) for each channel to the same point.

A circuit to prevent shorts is included, but if you connect to different points it may cause damage to the logger or to the origin of the signal. <u>Do not under any circumstances connect in the following manner.</u>



Do not remove the input cable from the logger and leave it while still connected to the origin of the signal. There is a chance that it will come into contact with another signal and cause a short.

1.Turn on the power by pushing up the power switch on the logger.

Due to the back-up function, even if the power is turned OFF, data will not be lost. If you are in the process of measuring or recording, the measuring or recording will be stopped.



About the Saving Location for Data Files.

The application automatically creates a new data file each time an Auto-Download session occurs.

Note that when using the Vista/7 OS the [Virtual Store] function will redirect files from the default folder into

which the program was installed to separate folders under [Program Files] for each user, as shown below:

[c:\User\(AccountName)\AppData\Local\VirtualStore\Program Files\(Application)].

(EX: If login was carried out using the account name [myname] and [Voltage Recorder for Windows] is the application being run, the saving location will appear in the application window as: [C: \Program Files \Voltage Recorder for Windows \data] but due to the [Virtual store] function the actual saving location will be [C: \User\myname \AppData \Local \VirtualStore \Program Files \Voltage Recorder for Windows \data] If the login was carried out from [Run as Administrator], the file will be saved to the folder as it appears in the application window.

Installation

Before installing, confirm the following

Is Windows® operating properly?

If Windows is not operating properly, "Voltage Recorder for Windows " may not be installed correctly or it may not operate properly.

Please quit all other applications

If other programs are open, please close and quit all of them, making sure to quit all Quick Start programs such as a virus checker.

- 1. Open Windows
- **2.** Place the acompanying CD-ROM into your CD-ROM drive. In a few seconds, the "Install Program" window wil appear.

*If that window does not automatically open, please open it by double clicking the CD-ROM Icon in "My Computer" on your desktop.

*Open the CD drive and click on Disk1 and then setup.exe

3. Continue the installation by following the directions as they appear.



4. After completing installation, click the [Finish] button.



How to Start Up

After installation has been completed, [VR for Windows] will be registered in the Window's [Start] Menu. Click on [VR for Windows] to open.

		1000	- A	-	
12	Programs		Accessories	-	and the second se
1 88		6	Hi for Windows	-	the second second second second
Ì	Documents	۲	Internet Explorer		and the second se
	Cattions	×	Microsoft Excel		
YS	Setungs	6	THERMO RECORDER for Windows	-	a contract of the second
P	Search		T&D Recorder for Windows (RTR-5) 120US	•	And a second sec
			TR-7W for Windows 1.00E	-	an and the same of the same
?	Help and Support		T&D Recorder for Windows (TR-5,7xU) 141E	•	
	Run	Ē	VoltageRecorder for Windows(E)	Þ	🚽 VR for Windows
			*	- 1	A CONTRACT OF A

For details about how to use the software, please see the explanations in the Software Help Menu.

In the Menu Bar, click [Help] - [Search by Topic], then click on one of the tabs [Contents], [Index], or [Search] to search for the topic or term you are unsure about or have questions about.



[Contents]

By clicking Mark, you can find detailed information for that subject.

[Index]

By selecting a Keyword in the Keyword list, and clicking the [Display] button at the bottom, a detailed explanation will appear.

[Search]

Enter the keyword(s) you wish to search for and click the [List Topics] button. All topics that contain the keyword will be displayed.

In the Menu Bar, click [Help] - [Data Display Format Settings], then select date display format.

By clicking the help button in a dialog box, an explanation for that dialog box will appear.

In the Graph Window, by clicking on the 💌 in the toolbar, you can have short explanations appear the next time you click on a menu, an icon, or anything in the main window.

Connecting the Data Logger

Connecting the Data Logger to your Computer



Connect the serial communication cable to your computer

Connect the serial (RS-232C) communication cable to your computer



Make sure to connect it to the correct place to ensure communication. Make sure that the cable is inserted fully, so as not to cause an improper connection.



10101

The communication cable connector is a D-Sub 9 pin female. Connect to a place with a mark as such.

Connect the serial cable to the data logger.

Connect the serial cable that is connected to your computer to the data logger.



Setting up the COM Port

Make necessary serial port settings to enable communication via the serial communication cable.

With Voltage Recorder for Windows set the serial port you wish to use. There are two ways to make the port settings: [Auto-Detect] or [Specify Settings].

Using [Auto-Detect]

* Make sure that the data logger is connected by the serial cable to the serial port you wish to use.

- 1. In the [Communication] Menu, select [Serial Port Settings].
- 2. Click the [Auto Detect] button to start the search.
- 3. After the search has been completed, a message will appear showing the results.
- **4.** Click the [OK] button to finish the settings.



If no port is detected, see [Troubleshooting] on pages 38-40.

UsingSpecify Settings

1. In the [Communication] Menu, select [Serial Port Settings].

2. In the [Possible COM Ports] List, place a check next to the port you wish to use for the Voltage Recorder for Windows.

3. Click the [OK] button to finish the settings.





Recording Start

There are 2 ways to start recording

- Start recording by using the computer software....Recording will start on the specified date and time.
- Start Recording via Buttons on Logger.... By pressing the REC button on the logger recording will start immediately.
- * When using the Expansion Unit, see the user's manual that accompanies the Expansion Unit.



How to Start Recording via Computer

1. Connect the data logger to your computer.

For details about connecting the data logger, see [Connecting the Data Logger] on page12.

2. From the [Communication] Menu, select [Start Recording].

Channel Name

It is possible to make channel name settings for each channel.

Recording Mode: <Select from: Endless / One Time>

One Time: Upon reaching capacity of 8,000 readings, "FULL" will appear on the LCD display and recording will automatically stop.

Endless: Upon reaching capacity of 8,000 readings,the oldest data is overwritten and recording continues.

Recording Interval: <Select from: "Rec. in Seconds" (1,2,5,10,15,20,30 seconds or 1,2,5,10,15,20,30,60 minutes) or "Rec. in Msec" (20,50,100,200,500 msec)> Click the▼ button to select an interval from the list.

Input Voltage Range:< "Rec. in Seconds" (±1V,±2V,±6V,±15V,or Auto-Range) or "Rec. in Msec" (±1V,±2V,±6V,±15V)>

Select by clicking the $\mathbf{\nabla}$ and choosing the Input Range from the lists.

Scale Settings:

It is possible to set the scale and the unit of measurement for the voltage range of each channel. For details, see [Scale Settings] on page 18.

Recording Start Time: <Select from: Programmed Start / Immediate Start > Programmed Start:Recording will begin on the set date and time.

Immediate Start: Recording will begin upon the completion of the settings.

Expansion Unit

Preheat:Transmits a preheat signal that is synchronized with the VR-71 recording timing to turn sensors or other devices ON and OFF.

Simultaneous Recording : allows you to simultaneously record with up to 4 VR-71 units. For details, see the user's manual that accompanies the Expansion Unit.

- **3.** After making all of the necessary recording condition settings, click the [Send Settings] button and the settings will be transmitted to the data logger.
- **4.** Once the settings have been successfully transmitted a message will appear, click the [OK] button to complete the setting procedure.



The logger display when using Immediate Start



The logger display when using Programmed Start

[Send Settings] button

By clicking the [Send Settings] button, only the recording condition settings (channel name(s), recording interval) will be sent and recording will not be started.

[Stop Recording] button

Click the [Stop / Recording] button to stop a recording session in progress. By clicking it while a programmed start is waiting to begin, the programmed date and time will be cleared.

[Receive Settings] button

By clicking the [Receive Settings] button, the current settings in the logger will be gathered and displayed. This can be used to check settings or to start a recording session with the same settings as before.

How to Start Recording via Buttons on Logger

If you wish to make settings to the Channel Name, Recording Mode, Input Voltage Range, Scale Settings or any others, it must be done first from the computer using the software.

- 1. Click the INTERVAL button to select the Recording Interval
- 2. By pressing in on the REC button for more than 2 seconds the REC mark will appear in the LCD and recording will start.



NOTE:

By starting a new recording session, all data currently saved in the unit will be erased.

Even if the unit is waiting for a programmed start, by pressing the [REC/STOP] button until the REC mark appears, you can start a new recording session immediately.

Recording Stop

You can stop a recording session by pressing the [REC/STOP] button until the REC mark disappears from the display. When it has disappeared, recording has stopped.

Record interval is confirmed while recording

By pressing the [INTERVAL] button during recording or while waiting for a programmed recording to start, the currently set recording interval will be displayed. Recording Interval settings will not be changed during a recording in progress.

Scale Settings

Here is where you can make settings for the desired scale from the voltage readings and the unit display pattern for the logger LCD.



Scale Settings

Specify how you wish the values for the recorded data for each channel's input voltage range to be displayed. Decide whether to use 2 voltage points to convert the scale or to use the conversion equation of y=Ax+B. It is also possible to set in what unit you wish to view the data in the Graph.

Specify 2 points

Taking into account the voltage input range of each channel, specify 2 points at which voltage data be taken and assign values to those points to reflect the scale you have chosen.

Specifying 2 p	oints Using the y=Ax+B
Ch.1	
0 V->	0
1 V->	1
	V
0 V.> 1 V.>	0 1 V

NOTE:

It is possible to enter decimals or minus values. However do not enter values that would result in the slope being 0.

Make sure to make settings for the slope of the conversion equation, such that the y-intercept is in a range of -9,999 to +9,999.

Use y=Ax+B

Do not specify 2 points, but enter a simple equation for conversion.

Specifying 2 points	Using the y=Ax+B
Ch.1	
Y = 10	X+ 5
	V 💌

NOTE:

It is possible to enter decimals or minus values. However do not enter values that would result in the slope being 0. Make sure to enter values for A and B that are between -9,999 and +9,999.

Graph Display Unit Settings

Click the $\mathbf{\nabla}$ button to select a previously registered unit or enter a new one directly.

* If you are make a new entry, you can enter up to 8 characters.

Creating Measuring Unit Patterns for Logger Display

Creating a Dot Pattern

There are 2 ways to create dot patterns.





Read Settings

Read the settings by calling up the scale settings file in which they have been saved.

Save Settings

It is possible to assign a name and save all scale settings, including logger LCD patterns, in the Scale Settings File.

Downloading Data

1. Connect the data logger to your computer.

For details about connecting the data logger, see [Connecting the Data Logger] on page 12.

2. In the [Communication] Menu, select [Download Recorded Data].

*If you are recording by msec, you cannot download data while recording. Please stop recording first and then download data.

	Download Recorded Dat	ta		×	
Assign a channel number for the Graph display.	- Data Display Voltage Recorder Ch.1>	Graph Ch.1 💌	Download	Stop Recordi	[Stop Recording] button
	Voltage Recorder Ch.2 -> Graph Ch.2 -> Downloading Status			Help	[Download] button
	0%	50%		100% Close	

3. By selecting the data display channel and clicking [Download], downloading will begin.

The data display channel allows you to specify in which channel in the graph you wish to view the downloaded data. It is possible to select a channel that already has data in it, but the currently displayed data will be overwritten by the newly downloaded data.

[Stop Recording] button

You can stop recording by clicking this button.

If you are recording by msec, you cannot download data while recording. Please stop recording first and then download data.

Graph Display Names and Functions



(1)A and B Cursor Movement Buttons

By clicking the arrow buttons, you can simultaneously move the A/B cursors.

2 A and B Cursor Buttons

Click and drag the A or B button to move the cursor to the left or right.

3The Vertical Axis Display ON/OFF

Shift the vertical axis scale display ON/OFF.



 @Overwrite Data
 @Edit Recording Conditions
 @Help

 ③Data List Display
 ⑧Re-order Channels
 ⑧Hide / View

 ④Return to Original Size
 ⑨Merge Channel Data
 Channels

 ⑤Step by Step to Original
 ⑩Erase Selected Channel Data
 Channels

④Toolbar

Buttons appear for frequently used commands.

5Menu Bar

Click on the desired menu in the Menu Bar to set or display each function from which you can choose from an array of commands.

6 Button for Moving Horizontal Axis

The time axis moves by clicking these arrow buttons.

(7)Horizontal Gauge Bar

By dragging the gauge you can move left and right to the data you want to be displayed.

®Vertical Axis of Each Channel

The vertical axis scale is displayed for each channel. By clicking $\blacktriangle \nabla$, the axis can be scrolled for each channel. 29

9 Button for Moving Vertical Axis

The vertical axis moves up or down by clicking these arrow buttons.

10Vertical Gauge Bar

By dragging the gauge you can move up and down to the data you want to be displayed.

1)A and B Cursor Position Information

12 Channel Info List Display

Displays data information for Channels 1 to 8.

Zoom in Using the Mouse

With the left button drag the mouse to outline the area you want to zoom in on



Menu Display Using the Mouse

By right clicking on the graph, the Menu will be displayed.

10.1	i c	:\Pr	ogram Fi	iles\VR	win(E)	\sample	.VT7 - Vo	oltage	Reco	rder	for W	indow	/s (V	'R-7)		
F	-ile	View	Commun	nication	Tool	Graph He	elp ·									
	Ì	R		1		5	¥ #	e	e 1	8 N	? 1	2	3	4	5	6
			•													
L	☑			1	2	÷ 3	-	∎₽	5				1			
		CH2		5.00	5.00) 15.	.00	0.0	-2.9	500		K				
	☑			000	1.000	A B	2 8	i00.0++	20	HHHHHH	Manna			20	ζ	
		CH4	-144444	5/00			u can Dí Selec	ted Ch	annel ()	N/OEE		• Ch. 1			4114114	Titulii
	☑				-5.00	-5.	0 Selec	ted Sca	ale ON/	OFF	•	Ch. 2	2			
L		CH6		10.00		-10	.C Retur	n to O	riginal S	ize		 Ch. 3 Ch. 4 	ł			
			07/30/20	05 07	/30/20	05 07/3 000 10:1	9 Vertic	al Axis	Display	r Rang	e	Ch. 5 Ch. 6		2005 2''000	07/	30/20 23'02''
		Ti	meA> 07/ 10:	/30/2005 17'07"00	i Tii O	meB> 07/ 10:1	30/2005 17'07''000	A<	>B			Ch. 7	7			Cal
	C	n. [Name	Interva	al S	ample	CursorA	Cu	rsorB	Unit		un, a		Max		Mi

Data List Display: [View] Menu

This is a list of the data that was displayed in graph form.

[Date / Time] Button

By clicking this button, you can shift the display between the recorded date and the amount of elapsed time since recording started.

Recorded Date Display	1-	Data List Nachin Avg. Calc. Ran Highest L	owest Average	Date / Time 4-2-500	0-	Channel2	0		[Date/Time] button
		Date / Time	+ V ch.1	+ ¥	kg≢ ch.3	. hetV	ch.5	ch.6 ch.7	-
		07/30/2005 10:17/02.000			\$00.0	-303.500	-2.960		
		07/30/2005 10:17/03.000			0.142	-303.000	-2.960		● −(2)
		07/30/2005 10:17/03:500 07/30/2005 10:17/04:000			0.959	-384.000	-2.965		Ŭ
		07/30/2005 10:17/04/500			1.657	-452.000	-2.965		
		07/30/2005 10:17/05:500 07/30/2005 10:17/06:000 07/30/2005 10:17/06:000			2.045	-498.500	-2.970		
		07/30/2005 10:17/07.000	0.750	-1.260	2.585	-545.500	-2.970		
		07/30/2005 10:17/08.000	0.870		3.740	-638.000	-2.975		
		07/30/2005 10:17/08:500	0.985	-1.230	4.940	-750.000	-2.975		
		07/30/2005 10:17/09:500	1.105		5.909	-875.000	-2.975		
		07/30/2005 10:17/10:500 07/30/2005 10:17/11:000	1.220	-1.190	6.500	-936.000	-2.975		
		07/30/2005 10:1711:500 07/30/2005 10:1712:000 07/30/2005 10:1712:500	1.340		7.310	-1011.000	-2.980		v 1
		I → No.1 > No.22 / 956 line (Fig.)	ght-Click to Ope	n Context Mersu)				

(1) The highest value is in RED, lowest is in BLUE, and the average is in PINK

(2)By dragging the Scroll Bar up and down you can move to the data you want. Elapsed Time Display

🗖 Data List					×
Max.Min.Avg. Calc. Ran Highest	Lowest Average	Date / Time	Print/Previe	Close	
Passed Time	2-1-100 v ch.1	4-2-500 V ch.2	Channel2 kgw ch.3	Channel2 het¥ eh.4	
0day 00:00'00.000			\$00.0	-303.500	<u> </u>
0day 00:00'00.500 0day 00:00'01.000			0.142	-303.000	
0day 00:00'02.000			0.959	-384.000	
0day 00:00'02:500 0day 00:00'03:000 0day 00:00'03:500			1.657	-452.000	
0day 00:00'04.000			2.045	-498.500	
0day 00:00'04:500 0day 00:00'05:000 0day 00:00'05:500	0.750	-1.260	2.585	-545.500	
0day 00:00'06.000	0.870		3.740	-638.000	
0day 00:00'06:500 0day 00:00'07:000	0.925 0.985	-1.230	4.940	-750.000	-
♦ No.1 → No.15 / 956 line (F	Right-Click to Open	Context Menu)		

Menu Display Using the Mouse

By right clicking on the list, the Menu will be displayed.

		4-2-5		Channel2	
Passed Time	V	γ	. kgw	hetV	
	ch.1	eh	Move to Highest Va	iue	
0.4			Move to Lowest Va	lue	
00ay 00.00 00.000			Print Preview		
00ay 00.00 00.000			Course and the state of the state	the share of	
0day 00:00 01:000			No decimal fours	ns channel	
0day 00:00 01:000			1 decimal figures		
0day 00:00 00:000			2 decimal figures		
0day 00:00 03:000			3 decimal figures		
0day 00:00'03 500			4 decimal figures		
0day 00:00 00:000			5 decimal figures		
0day 00:00'04 500			Save current figure	e settings	
0day 00:00 09:000	0.750	-11	Font		
0day 00:00'05 500	0.805		Line		
UUU UU.UU UU.UUU	0.000		Color		

Graph Maintenance

Making Changes to the Graph Display

Selected Channels ON / OFF: [View] Menu

- 1. By moving the mouse to [Selected Channels ON / OFF], the channel numbers are displayed.
- 2. By clicking the channel No. of the channel you wish to view, the settings will be completed.
 - * The same operation can be done by clicking on the channel number icons in the Toolbar.



Selected Scale ON / OFF: [View] Menu

- 1. By moving the mouse to [Scale Channels ON / OFF], the channel numbers are displayed.
- By clicking the channel No. of the channel you wish to view, the settings will be completed.
 * The same operation can be done by clicking on the channel number icons in the Toolbar.



Erase Selected Channel Data: [Tools] Menu

- **1.** Put a check on the channel number you wish to erase.
- 2. Click the [OK] button to complete the deletion.



Re-order Channel Data: [Tools] Menu

You can re-order the data during graph display. There are two methods to use when re-ordering channels:[Re-order by Dragging a Channel Number] and [Specify the Channel Numbers to be Moved].

Re-order by Dragging a Channel Number

Drag the channel name / number you wish to move to the newly desired channel name / number position and drop it.



Specify the Channel Numbers to be Moved

1. Assign numbers to: Selection 1: (original position No.) / Selection 2: (desired position No.)

2. Click the [Change 1 and 2] button to complete the re-ordering of channels.



Set High, Low, Average Calculation Range: [Tools] Menu

1. Enter the new calculation range in the [Set High, Low, Avg. Calculation Range]

	Set High, Low, Avg. Calculation Range	\mathbf{X}
	Current Calculation Range	
	From: 7 / 30 / 2005 10:17 ' 2 0 msec.	Cancel
	To : 7/30/2005 10:24'59 Omsec.	Help
Enter the	- New Calculation Range	[Entire Graph]
numerical values	From : 7 / 30 / 2005 10 : 17 · 2 0 msec.	
	To: 7 / 30 / 2005 10 : 17 / 2 0 msec.	

By clicking the [Entire Graph] button, the dates and times for the entire graph will be displayed.

If in the graph display, you place the A cursor at the position for the beginning of the calculation range and the B cursor at the end of the range, those dates and times will appear as the new range in the [Set High, Low, Average Calculation Range] Display when it is opened.

2. By clicking the [OK] button, the High, Low and Average will change for each channel's data list and the graph will change to display that data contained in the new range setting.

Editing Recording Conditions: [Tools] Menu

1. By clicking the [Channel No.] button of the channel you wish to edit, the [Name] and [Started Date / Time] in the "Edit Items" display will show info for that channel number.



Name: Up to 32 letters can be entered

Starting Date/Time: The month, day, year, hour, minute and second can be changed.

2. After completing the changes, click the [OK] button to finish.

If you wish to continue to change other channels, repeat the process as in 1.

* The [Restore] button is only effective while making changes. After clicking the [OK] button the

Scale / Unit Conversion: [Tools] Menu

Specify

It is possible to make settings for the conversion of units and scales for each channel of downloaded data.

1. Select to use 2 voltage points to convert the scale or to use the conversion equation of y=Ax+B.

2 points	Use y=Ax+B				
Scale, U it Conve	ersion	_		×	
Specify 2 points	Use y=Ax+B				[OK]
CH1 V > 0 1 V > 1 V	Conversion Info ch.1: y = [1]x + [0] unit : V	CH5	Conversion Info ch.5 : y = [1]x + [0] unit : V	Cancel Return all Conversions	button
□ CH2 □ V> 0 1 V> 1 V	Conversion Info ch 2 : y = [1]x + [0] unit : V	CH6	Conversion Info No Data	Help	
- CH3 0 V> 0 1 V> 1 kow	Conversion Info ch.3 : y = [1]x + [0] unit : kgw		Conversion Info No Data		
CH4 0 V> 0 1 V> 100 herv	ch 4 ; y = [10] + [0] unit : hot		Conversion Info No Data		
	Conversion In	fo			

- 2. Make settings for the conversion equation and unit.
- **3.** Click the [OK] button to finish.

Conversion Info

The currently set conversion equation and the character array of the current unit will be displayed. y stands for the value after conversion and x is the voltage input directly from the sensor.

Change Graph Colors: [Tools] Menu

1. Click the topic you wish to change.

If you wish to change the colors: By clicking the button the color samples will appear. If you wish to change the line widths: Each click of the \blacktriangle button will make the lines wider and each click of the \blacktriangledown button will make them thinner.

* If you wish to make changes to the graph colors, line types, or line widths, click on the [Channel No.] button first and then click on the topic you wish to make changes to.



2. After confirming the color, by clicking the [OK] button the change will be completed.

* By clicking the [Return to Default] button, you will return to the color settings when the software was opened.

Memory

Here it is possible to save 1 pattern of settings for use in the display and 1 for use when printing.

- **1.** Select [Display] or [Print].
- 2. Click the [Save] button to save the settings.



By clicking the [Load] button, you can call up a saved pattern.

Vertical Axis Range Display Settings: [Tools] Menu

You can set the upper and the lower limits of the graph's vertical axis scale for each channel.

NOTE:

If you have put a check on [Fixed], the lines in the graph may exceed the boundaries of the graph.Set the lower limit at more than -40,000 and set the upper limit at less than 40,000.

1. Check [Fixed] of the channel you wish to set.

Select [Fixed] and enter numerical values.

Vertical Axis Ran e Display Setting	is 🗙
Ch.1 C Auto © Fixed	Ch.5 C Auto © Fixed
Lower 12.1358 to Upper 11.2958	Lower 2449.666 to Upper 723.6667
Ch.2 C Auto © Fixed	Ch.6 C Auto C Fixed
Lower 9.2025 to Upper 8.3925 Limit 8.3925	Lower 10.2648 to Upper 21.4658
Ch.3 C Auto C Fixed	Ch.7 C Auto C Fixed
Lower to Upper Limit	Lower to Upper
Ch.4 C Auto © Fixed	Ch.8 C Auto C Fixed
Lower 3.1133 to Upper -2.8867 Limit	Lower to Upper
Help	OK Cancel
	[OK] Button

- 2. Enter upper and lower limit values.
- **3.** By clicking the [OK] button, the setting will be completed.

Graph Operations: [Graph] Menu

Return to Original Size

Return from zooming in on one part of data to the original whole graph size.

Zoom out step by step

Return step-by step from zooming in on one part of data to show a larger range of data.

Viewing Current Data

By communicating at a 1 second interval with a VR-71 logger connected to your computer it is possible to view the current data readings in real time graph form.

NOTE:

It is impossible to save the data displayed in the current data readings.

For this, we suggest setting the Input Voltage Range to Auto-Range.

If a reading exceeds the set Input Voltage Range, the measurement readings will not be displayed properly.

1. In the [Communication] Menu, select [Current Data Display]

2. Enter an upper and lower limit for the vertical axis scale in the graph and click the [Send Settings] button.

Settings for the upper limit must be lower than 40,000 and settings for the lower limit must be higher than -40,000.



3. By clicking the [Start Monitoring] button, the display of current data readings will begin.



Saving Recorded Data

After downloading recorded data, please save any necessary data.

Three Ways to Save Files

①In the [File] Menu, [Overwrite All Data]

Will save any changes to file without changing File Name and Saving Location. The same operation can be carried out from [Save] in the Toolbar.

2 In the [File] Menu, select [Save All Data as...]

Save with a new File Name.

③In the [File] Menu, select [Save Displayed Data as...] Save only that data in the current display. This is handy when you wish to save only the desired data.

EX: [Save All Data as...]

- 1. Click [Save All Data as...] in the [File] Menu.
- 2. Specify the [Save in:] and enter a [File Name].

	Specify nam	e of the data file			?×	
Specify a Location -	<u></u>	VRwin(E)	-	+ E 6	* 📰 •	
	sample					
	File name:	• \/T7			Cours 1	[Save]
	nie <u>n</u> ame.	.v1/				button
	Save as type:	VoltageRecorder Dat	a Files(*.VT7)	•	Cancel	
		Enter a	File Name			

3 Click [Save] to complete the saving process.

Creating Text File

By saving the recorded data as text file, you can create a file type that can be read by common spreadsheet software.

- 1. Click [Save Data in Text File] in the [File] Menu.
- 2. Select the [Text File Type] and [Range to be saved], and click [OK].

Comma, Tab, Space, and Semi-colon are codes used by common spreadsheet software, such as Excel and Lotus, when reading Text File to divide cells.



3. Designate the location to which the file should be saved and click [Save] to create and save the data as a Text File document.

The extension for the created file will be [.txt].

	Select Text File Name	
Assign a Location	Saveşter [⊇ VRwin(E) ▼ ← È Ĕ E	
	File name: •.TXT Save Save as type: Text Format Files(*.TXT Cancel	[Save] button

Enter a File Name

* Text File cannot be read into Voltage Recorder for Windows.

Opening a Saved File

To open a previously saved file, designate the file name to open it.

- 1. Click [Open] in the [File] Menu.
- 2. Select the name of the data you wish to open and click [Open] to view the data in graph form.

	Open Data File	
	Look in: 🗁 VRwin(E) 💽 🖛 🛍 📸 -	
Select a File	sample	
	File <u>n</u> ame: sample	[Open] button
	Files of type: VoltageRecorder Data Files(*.VT7) Cancel	
	- Selected File Info	
	Ch.1 Name:2-1-100 Recording Interval:500msec, Sample: 944 07/30/2005 11:17'07 Start, Endless, Range:6V	
	Ch.2 Name:4-2-500 Recording Interval: 2sec , Sample: 237 07/30/2005 11:17'07 Start, Endless, Range:15V	
	Ch.3 Name:Channel2 Recording Interval: 1 sec , Sample: 357	

View the information of the selected file.

Reinstalling

Before reinstalling, make sure to carry out the uninstall program first. Also, before uninstalling, make sure to quit all Voltage Recorder for Windows applications.

- 1. In the Windows Control Panel, click on [Add/Remove Programs].
- **2.** From the list of currently installed programs, select [Voltage Recorder for Windows] and click the [Change / Remove] button.



3. After the uninstall process is completed, reinstall by following the directions to [Install].

Even after uninstalling, saved data files will still remain in the folders and locations they were saved in.

Troubleshooting

Q:The computer won't communicate via the Serial Port. What should I do?

A: Try two or three times to find the port connection by using the Auto-detect function.

A: Check to make sure that the power of the main unit is ON.

A: Check the connection between the computer and the data logger.

Communication will take place only through the serial port (RS-232C) and will

not work through the printer port or any other port.

A: Check to make sure that you can control the Voltage Logger via the software.

A: If you have access to another computer, try seeing if communication works with the other computer.

A:If you have a computer with energy saving function settings, make sure that the serial port has not been turned off. Especially on NEC brand PC98 notebook computers the default setting may be such.

A: Check to make sure that the serial port has not been rendered unusable by the BIOS setting.

A: Make sure that the serial port setting has not been made to render the port unusable. With some computers, especially all-in-one computers the serial port serves as the modem jack.

[How to check]

1. Open the Device Manager

For Windows XP or 2000

1. In the [Start] Menu, right click on [My Computer] and click on [Properties]

2. In the System Properties Window, click on the [Hardware] Tab, then click on the [Device Manager] button to view the Device Manager Window.

For Windows Me or 98

1. Open the [Control Panel] and double click on [System]; the [System Properties] will be displayed.

2. Click the [Device Manager] Tab to view the Device Manager Window.

2. In the [Device Manager], click on [Port (COM&LPT)] and check to see if under that appears [Com Port (COM1)] or [Com Port (COM2)].

If a port appears, it should be usable.

If a mark [!] or [×] appears next to the port, this communication port is unusable. If you cannot use a communication port please contact your computer company.

To find out more details about an unusable communication port: Select the port with a [!] mark, and then click on [Properties] to view the details about that port.

A:If your computer has an internal modem, make sure that the communication port is not being used by it. When the communication port is being used as the modem port, that port cannot be used. Either quit using the modem or use another port.



A:If your computer has no serial port, use a Serial-USB conversion cable and carry out communication via USB connection.

Contact your local authorized T&D sales representative about USB Serial Conversion adaptors.

A:Sometimes communication will not work if a switch has been added to the serial port (RS-232C) or an extension cable has been added to the communication cable.

A:Check to see if some other communication software is in use.

A:If your desktop computer has two serial ports, try connecting the communication cable to the other port and try communicating again.

Q:I can't get the communication cable connected to the computer. What should I do?

A: Please connect the communication cable provided with the Voltage Logger

into the serial port of your computer (D-SUB 9 pin male connector).

NOTE:

Please use only straight adapters.



, If the connector on your computer is a D-SUB 9 pin male then there is no need for an adapter.

- , If the connector on your computer is a D-SUB 25 pin female then use an adapter (D-SUB 25 pin male to a D-SUB 9 pin male).
- , If the connector on your computer is a Half pitch 14 pin female then use the adapter (Half pitch 14 pin male to a D-SUB 9 pin male) or a combination (Half pitch 14 pin male to D-SUB 25 pin male) and (D-SUB 25 pin female to a D-SUB 9 pin male).

Q:The date and the time of the recorded data are different from the actual date and time. Why?

A: The Voltage Logger has no internal clock. When you set up a programmed recording start or when you download data, the date and time that are shown are taken form your computer's clock. If your computer's clock is not correct, it will affect the recorded data.

Q:ls my data being backed up?

A: If the battery power becomes weak during operation a battery warning mark will appear on the LCD. If the power is left to become even weaker, the unit

will stop operation but all data will remain backed up.

Voltage Recorder VR-71

Measurement Item	Voltage
Number of Channels	2 (Common ground)
Measurement Range	Range:±1,2,6,15V Auto Range:Fixed Range
Measurement Accuracy	±0.5%±5dgt (10°C~ 30°C)
Display Resolution	Min 1mV
Recording Interval	20 selections : 0.02sec - 60min (Default : 10seconds)
Recording Capacity	8000 readings x 2 channels
Recording Mode	Endless / One-time (Default : One-time)
LCD Display Items	Measurement Reading / Recording Status / Time / Memory Capacity / Battery Life Warning / Unit of Measurement
Power Source	AAA Alkaline Batteries(LR03) x 2
Battery Life	About 5-9 months*
Interface	Serial Communication (RS-232C)
Dimensions	H55mm × W88mm × D24mm
Weight	About 93g (including 2 batteries)
Temperature and Humidity Durability of the Unit	Temp:0-50°C Humidity:90%RH or less (no condensation)
Waterproof	None
Attached Sensor / Cable	2 Input Cables (VR-7101)
Included in Kit	Software Set / Serial Communication Cable x 1 / AAA Alkaline Batteries x 2 / User's manual and Warranty x 1
Other	It is possible to measure electrical current
Compatible OS	Microsoft Windows 7 32/64bit English
	Microsoft Windows Vista 32bit English
	Microsoft Windows XP 32bit (SP2 or above) English
	Microsoft Windows Me English
	Microsoft Windows 98SE English

*Note :

At recording interval of 1 sec: about 5 months / at rec. interval of more than 2 seconds: 9 months / at a recording interval of 0.02 seconds: about 13 days.

Software Specifications (Voltage Recorder for Windows)

Compatible Devices	VR-71
Number of Channels	8 Channels Simultaneous Display and Processing Possible to process a mixture of up to 4 VR-71 units
Communication Functions	Recording Start (Programmed Start / Immediate Start), Record- ing Stop, Main Unit Settings (Channel Name / Recording Interval / Recording Method / Upper and Lower Limits / Expansion Unit Settings) / Downloading of Recorded Data, Create display unit and transmit to logger (dot matrix pattern), Voltage input conver- sion equation (2-point or y=Ax+B) setup and transmission to logger, Auto detect of Serial COM Port
Graph Display	Graphs for each Channel (Zoom in / out and scroll with mouse or keyboard), Vertically Scroll Graph for Each Channel, Channel Graph Color/ Background Color, Customize Graph Scale Lines, Turn ON and OFF Channel Display, Move Vertical Scale to Desired Position in Graph (View/ Hide Scale For Each Channel), Display Current Data in Trend Graph (no saving to file)
Data Display	Channel Name, Recording Interval, Number of Readings Highest, Lowest and Average Readings, Unit of Measurement AB Cursor Dates / Times and Data Readings, Calculated Difference between Cursor A and B
File Output	Voltage Recorder Data File / Text File (CSV, etc)(Selected Range or File for Entire Period)
Printing	Graph / Tables
Others	Data List Display, Change Scales, Calculation Range Settings Set Display Range for Vertical Axis, Edit Recording Conditions, Delete Data by Channel, Re-order Data by Channel
Compatible OS	Microsoft Windows 7 32/64bit English Microsoft Windows Vista 32bit English Microsoft Windows XP 32bit (SP2 or above) English Microsoft Windows 2000 English Microsoft Windows Me English Microsoft Windows 98SE English
PC / CPU	IBM Compatible with higher than Pentium 90MHz Serial Port (RS232-C D-sub 9pin)
Memory	More than 16MB
Hard Disk	More than 2MB of free space (Data will need more space)
Monitor	Recommend VGA / SVGA (800 x 600) or higher / more than 256 colors

*About problems downloading data with Voltage Recorder for Windows

On Computers where the Hyper-Threading function is activated, problems have been found to occur when downloading data with a USB-Serial Cable conversion adaptor. There are two solutions to this problem. The first is to turn off the Hyper-Threading function (usually done in the BIOS settings). The second possible solution is to download data on a computer that has a serial port.

Contact your local authorized T&D sales representative about USB-Serial conversion adaptors.

Options

Unit:mm VR-7101 Input Cable 100 900 Cable Length : about 1m **(**4) (İ) VR-7102 Input Cable Cable Length : about 1m m •) î **(**4) **(2)** VR-7103 4-20mA Probe Maximum Current Input : 40mA MAX40 Internal Resistance : 100 **(4**) 2 9 3 Output : 2V at 20mA / 0.4V at 4mA 2 Conversion Accuracy : 0.5% Cable Length : about 1m ①Clip②M3.5 Crimp Terminal③Vinyl Coated Electrical Wire④Stereo Mini Jack (Ф2.5) VR-1C10 Connection Cable VR-00P1 Expansion Unit Dimensions: H72mm×W95mm×D24mm Cable Length: about1m (Excluding Protrusions) 1000 Volta TR-00K2 Wall Attachment Attachment: Screws x 2, Double Sided Adhesive Tape

For product information or questions contact us at T&D corporation

Shimadachi 817-1, Matsumoto, Nagano 390-0852 Japan TEL:+81-263-40-0131 FAX:+81-263-40-3152 Office Hours : Monday to Friday 9:00-12:00 / 13:00-17:00 (GMT+9:00 Tokyo Time)

(Home Page)

http://www.tandd.com/

Voltage Recorder for Windows User's Manual

Published by T&D CORPORATION

© Copyright T&D Corporation. All rights reserved.